





Headlights

Type A

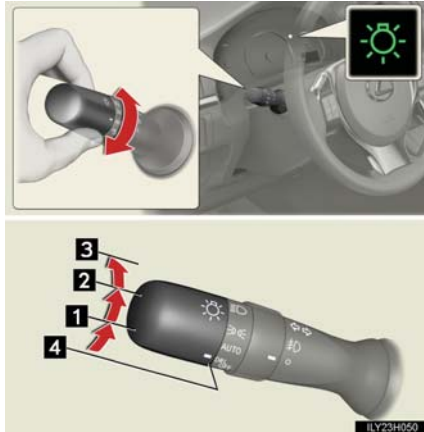





- 1 **AUTO** The headlights and side marker, parking lights, daytime running lights and so on turn on and off automatically (when the "POWER" switch is in ON mode).
- 2  The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- 3  The headlights and all the lights listed above (except daytime running lights) turn on.
- 4 **DRL OFF** The daytime running light turn off.

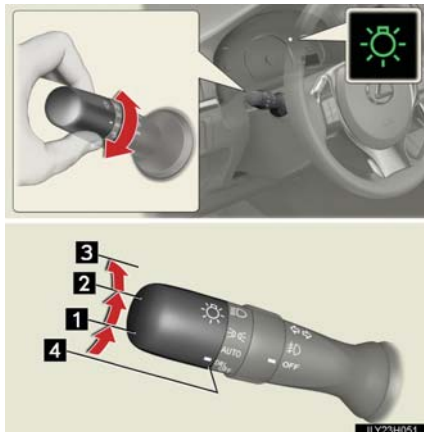Type B

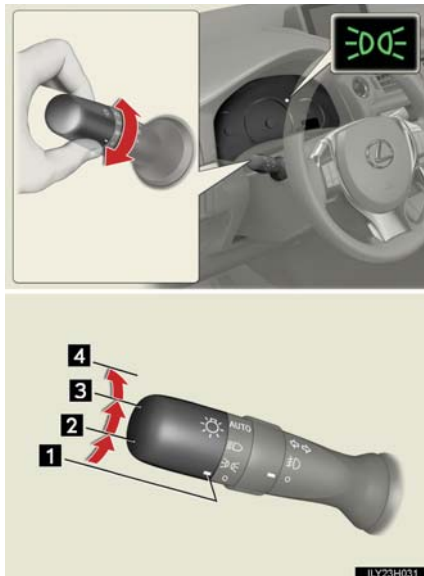


Type C



- 1  The daytime running lights turn on.
- 2  The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- 3  The headlights and all the lights listed above (except daytime running lights) turn on.
- 4 **AUTO** The headlights and side marker, parking lights, daytime running lights and so on turn on and off automatically (when the "POWER" switch is in ON mode).

Turning on the high beam headlights

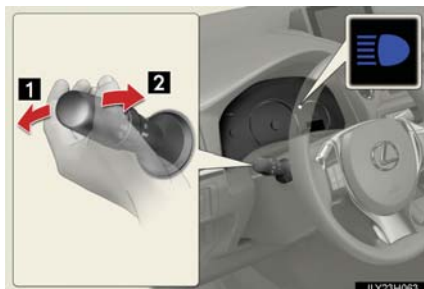

- 1 With the headlights on, push the lever away from you to turn on the high beams. Pull the lever toward you to the center position to turn the high beams off.
- 2 Pull the lever toward you and release it to flash the high beams once. You can flash the high beams with the headlights on or off.



Windshield Wipers and Washer

■ Intermittent windshield wipers with interval adjuster (if equipped)

The wiper operation is selected by moving the lever as follows.

When intermittent windshield wiper operation is selected, wiper intervals can be also adjusted.

Type A

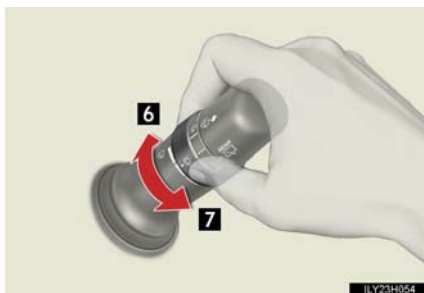
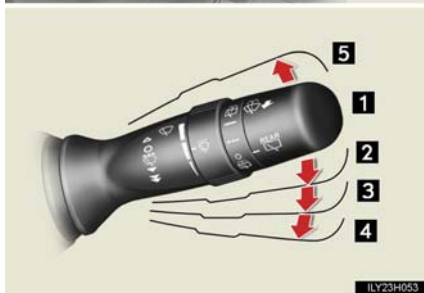


- 1 OFF
- 2 Intermittent windshield wiper operation
- 3 Low speed windshield wiper operation
- 4 High speed windshield wiper operation
- 5 Temporary operation

- 6 Increases the intermittent windshield wiper frequency
- 7 Decreases the intermittent windshield wiper frequency

- 8 Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.

Type B

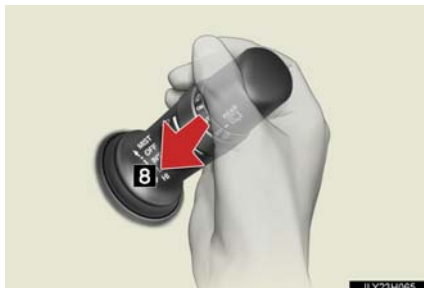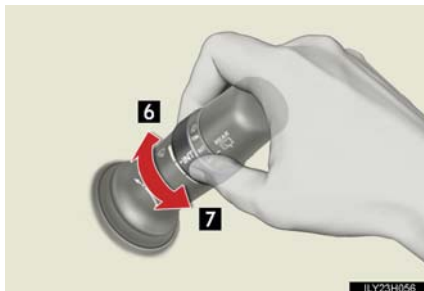

- 1 **OFF** OFF
- 2 **INT** Intermittent windshield wiper operation
- 3 **LO** Low speed windshield wiper operation
- 4 **HI** High speed windshield wiper operation
- 5 **MIST** Temporary operation

- 6 Increases the intermittent windshield wiper frequency
- 7 Decreases the intermittent windshield wiper frequency


- 8 Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.

■ Rain-sensing windshield wipers (if equipped)


When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

When "AUTO" is selected, the sensor sensitivity can be adjusted as follows by turning the switch ring:


Type A

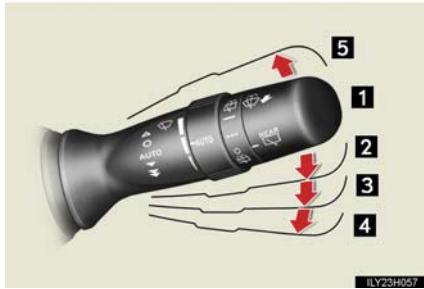

- 1 OFF
- 2 **AUTO** Rain-sensing wiper operation
- 3 Low speed wiper operation
- 4 High speed wiper operation
- 5 Temporary operation

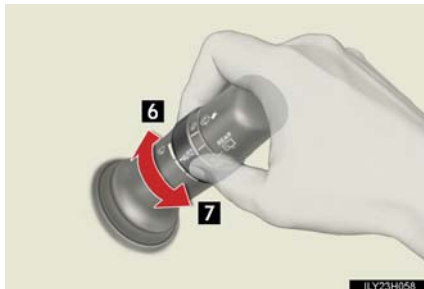

- 6 Increases the sensitivity
- 7 Decreases the sensitivity

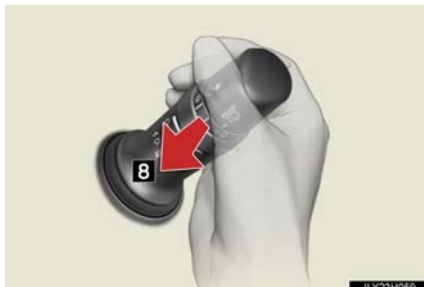


- 8 Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.


Type B




- 1 **OFF** OFF
- 2 **AUTO** Rain-sensing wiper operation
- 3 **LO** Low speed wiper operation
- 4 **HI** High speed wiper operation
- 5 **MIST** Temporary operation

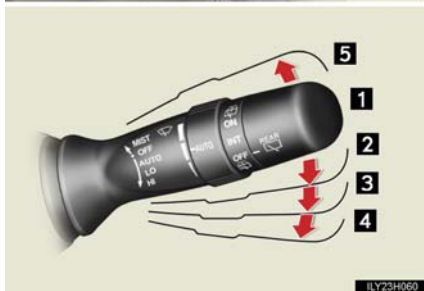

- 6 Increases the sensitivity
- 7 Decreases the sensitivity

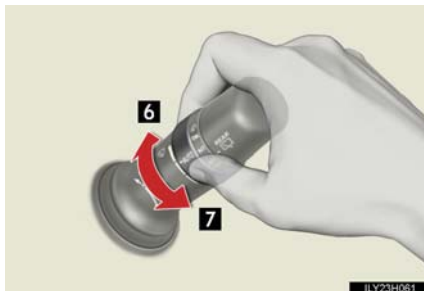


- 8 Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.

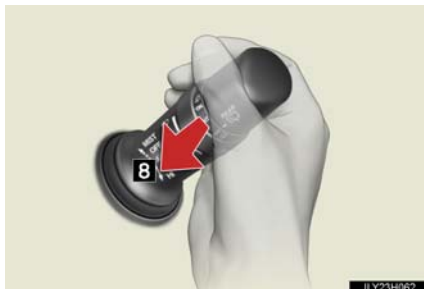


Rear Window Wiper and Washer (if equipped)

Type A

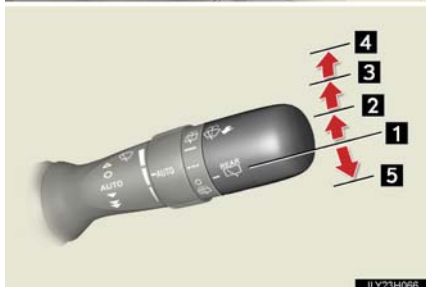

- 1 OFF
- 2 Intermittent window wiper operation
- 3 Normal window wiper operation
- 4 Washer/wiper dual operation
- 5 Washer/wiper dual operation

Type B

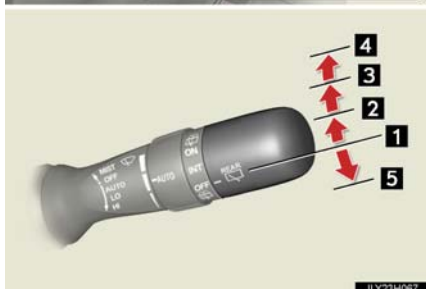

- 1 OFF
- 2 Intermittent window wiper operation
- 3 Normal window wiper operation
- 4 Washer/wiper dual operation
- 5 Washer/wiper dual operation